


## HOW TO INSTALL YOUR TWIN "HANGER" HEADBOARD

Installation is pretty easy and doesn't require any special tools, but you will need a hammer, tape measure and pencil. In your box, you will also find 4 nails and hooks that you'll use to hang your headboard.

1. Lay your panels face up on the floor to preview how your headboard will look when assembled and installed. You can rearrange them any way you like to get the look you like best.

If you purchased a color mix and want it to look exactly like the website, skip to step 2.

2. Color mix designs are marked with a number on the back. They are meant to be assembled from left to right to match the design on the website. (Panel 1 should be placed farthest to the left of the bed.)
3. To make sure your headboard is properly centered behind your bed, we recommend hanging the middle panel(s) first. See the diagram below.

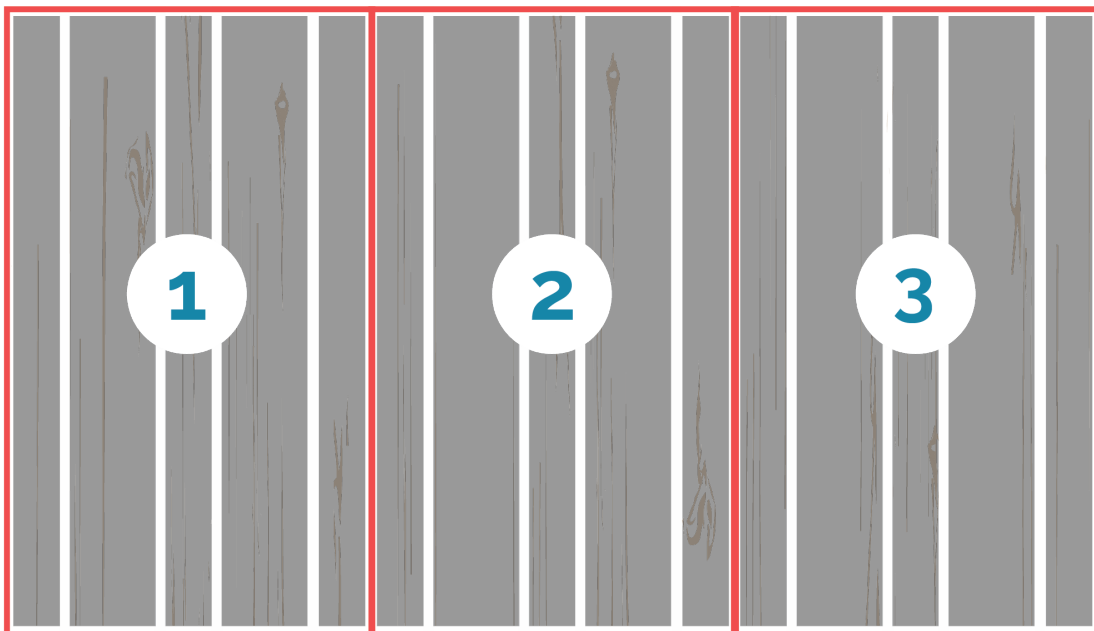



This next part makes more sense if you see it. We suggest that you watch our installation video before moving forward. Scan the QR code or go to [bit.ly/bwfloat](https://bit.ly/bwfloat).

4. Set the center panel on top of your bed (in the center) and lean it against your wall. Look behind the panel and mark the top of each hook.
5. Remove the panel and move your bed away from the wall so you have room to work. Measure to make sure your marks are the same distance from the floor. Then measure down 2 inches and mark an "X". Nail 1 picture hanger hook into each X and hang the first panel.
6. Position your second panel next to the first. Make sure the top and bottom corners are even. Then mark the top of the hooks, remove the panel, measure down 2 inches and mark an "X". Nail 1 picture hanger hook into each X and hang the second panel.
7. Repeat for all remaining panels.
8. Push your bed back in place and enjoy your beautiful, new wood plank headboard! We'd love to see how it looks. Share your headboard with us on Instagram or Facebook. Snap a pic, post to our page, or tag us, @barnwalls.

**THANK YOU FOR CHOOSING BARN WALLS!**

Cleaning your headboard is as easy as installing it! To prevent it from becoming faded or discolored, use only wood oil polish – not chemical cleaners like Lysol or Windex.