



Full “Leaner” Headboard Installation Guide


Thank you for purchasing a Barn Walls headboard. In the box you will find 10 screws and 2 loose boards.

Preview your headboard

1. Determine where to position each panel before assembling - Lay them on the floor facing up or lean them on the wall together to preview how it will look once assembled. For “Mix” colors designs, skip to #2.
2. The “Mix” colors designs will be marked with a number and must be arranged from left to right. Panel number 1 is the first panel on the left of the bed.

Prepare for assembly

3. Carefully lay down all panels face down on the floor over a smooth surface such as a carpet, bed sheets, towels, etc., to avoid any accidental scratching. **DO NOT STEP ON THE PANELS.**
4. Place the loose boards as shown in the picture below. Position the screws, preferably over the wider boards. As you start screwing the boards always check that the panels remain flush.
5. Peel three Velcro strips of the same kind and place them as shown below. Stick the remaining three Velcro strips to the ones already on the headboard and peel them off so the adhesive faces out.
6. Position the headboard in the desired location, lean it against the wall and push bed.

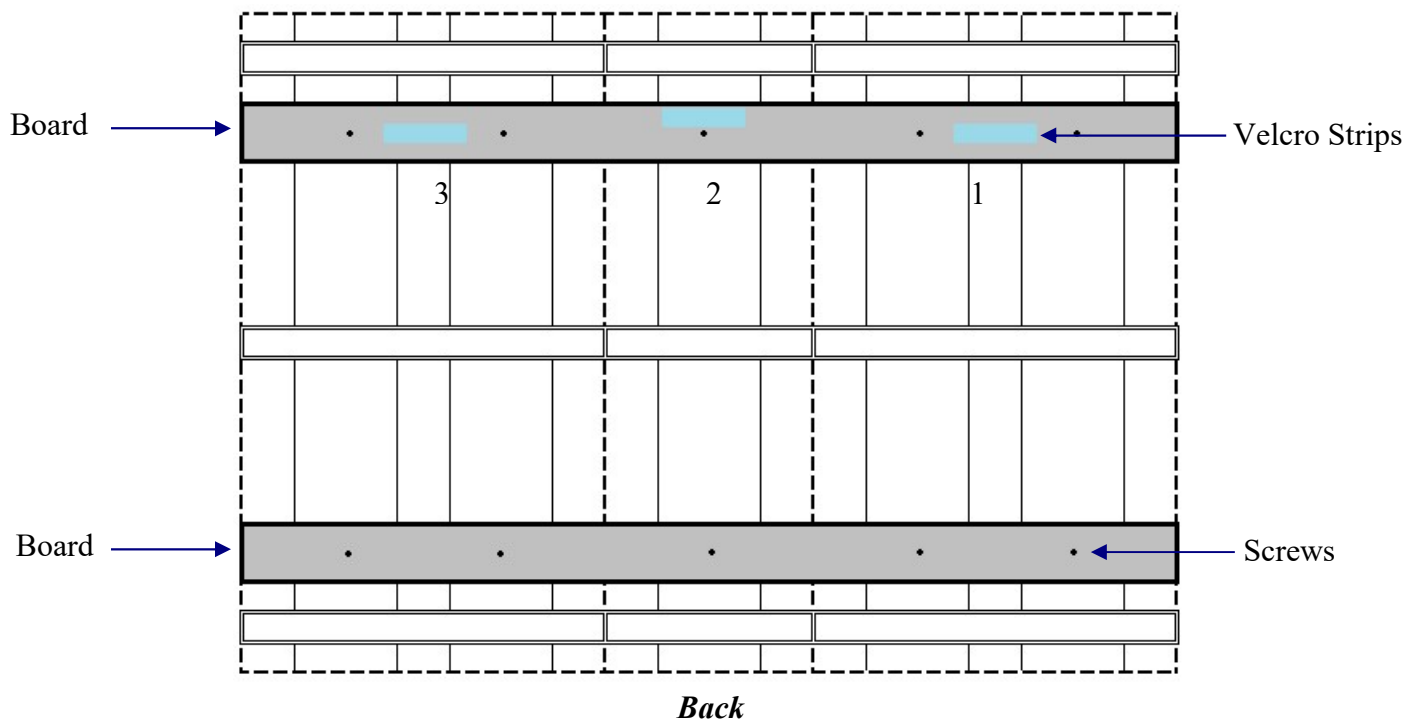

751 N Monterey St, Suite 112, Gilbert, AZ 85233, Tel: 602-330-1871 info@barn-walls.com